


User Guide

Stilux indoor station

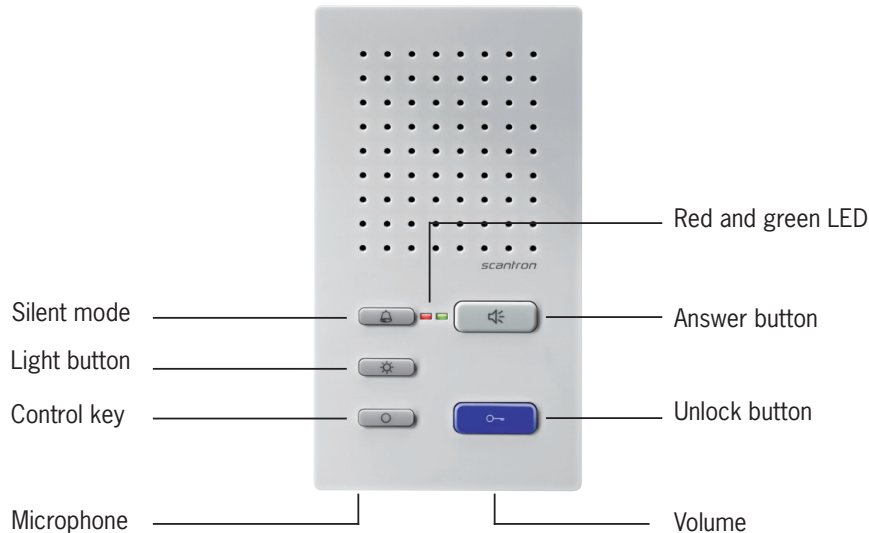

Stilux

Stilux has many user-friendly functions. Please see which functions your indoor station has and how to operate it below.

Operation

Incoming call:

The indoor station will ring. Press the answer button to answer the call.

Simplex communication handles street noise:

Press the answer button down for more than 1 second to establish one-way communication with better sound. Speak while pressing down the answer button, release it to listen.

Engaged signal:

If someone calls while another call is already in progress, the green LED will blink three times. It is still possible to unlock the door.

Ending a call:

Press the answer button to end a call or wait for the automatic termination after 2 minutes.

Unlocking the door:

Press the unlock button to unlock the front door.

Lighting the staircase:

Press the light button to turn on the light in the staircase.

Silent mode:

Activate silent mode by pressing the silent mode button. When silent mode is activated the red LED will light up and calls made to the indoor station will be silent.

Regulating the ringtone volume and voice volume:

The ringtone volume can be adjusted by turning the volume control right (higher) or left (lower) when a call is not in progress. The voice volume can be adjusted in the same way when a call is in progress.

Changing the ringtone:

You can change your ringtone to be different depending on whether the caller is at the front door or the apartment door. To change ringtones, press the silent mode button for 8 seconds until a short acknowledgement tone is heard and both lights turn on.

If you wish to change the ringtone for the front door, press the unlock button. A different ringtone will be played each time the unlock button is pressed. The last played ringtone will be saved.

If you wish to change the ringtone for the apartment door, press the light button. A different ringtone will be played each time the light button is pressed. The last played ringtone will be saved.

To deactivate ringtone selection, press silent mode button or simply don't press any button for 8 seconds.

Cleaning:

The indoor station should be cleaned with a soft cloth. Use only a mild cleaning agent without an abrasive.